

Zone chair.

Reclining




Lock and release of backrest

The backrest can be locked and released by pulling back the lever located underneath the seat on the left-hand side. To lock the backrest in position push the lever forward.



Adjustable arms

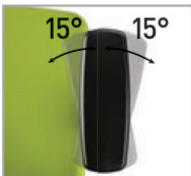

The up and down (1D), angle (2D), back and forth (3D), positioning of the arm pads are adjustable. The respective movable ranges are 62mm for up and down, 15° for inside, 15° for outside, 40mm for back and forth.

Lumbar support



The lumbar support that firmly grasps the lower back can be adjusted within a vertical range of 40mm to match your physical requirement. Use both hands to adjust the lumbar support to a comfortable position.

Adjustable seat height



You can adjust the height of the seat by pulling up the lever under the seat on the right (stroke: 120mm).

Adjustable seat depth



You can adjust the depth of the seat by operating the slide control lever on the front of the seat (stroke: 40mm).