

# Portone chair.

## Reclining




### 1 Reclining tension adjustment

Reclining tension can be adjusted by rotating the dial located under the center of the seat. To harden the tension, rotate it clockwise, and to lessen, turn it counterclockwise.

### 2 Lock and release of backrest


The backrest can be locked and released by pulling out the lever located underneath the seat on the right-hand side. The backrest can only be locked when it's upright.

## Adjustable arms

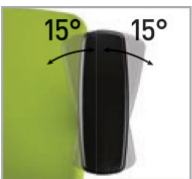

The up and down (1D), angle (2D), back and forth (3D), positioning of the arm pads are adjustable. The respective movable ranges are 62mm for up and down, 15° for inside, 15° for outside, 40mm for back and forth.

## Lumbar support

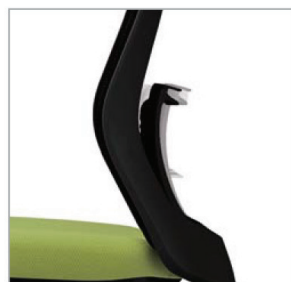

The lumbar support that firmly grasps the lower back can be adjusted within a vertical range of 60mm to match your physical requirement. Leaning against the backrest bends the lumbar support softly so it firmly supports the back.

## Headrest adjustment



Headrest height can be adjusted by sliding up the headrest (stroke: 50mm).

## Adjustable seat height



You can adjust the height of the seat by pulling up the lever under the seat on the right (stroke: 120mm).

## Adjustable seat depth



You can adjust the depth of the seat by operating the lever on the left of the seat (stroke: 55mm).